
Enabling and Viewing SMART Board Utilization Tools

The following instructions show the end user how to enable and access the SMART Board utilization tools.

1. Open the SMART Notebook application
2. When you see the Welcome to Notebook Software window click the Help/Support tab
 - a. The window should look similar to figure 1


Figure 1



3. Click on the SMART Board Diagnostics option as shown in the Red Box in Figure 1
4. You should now see a screen similar to Figure 2


P-E-M Technology Instructions

Figure 2

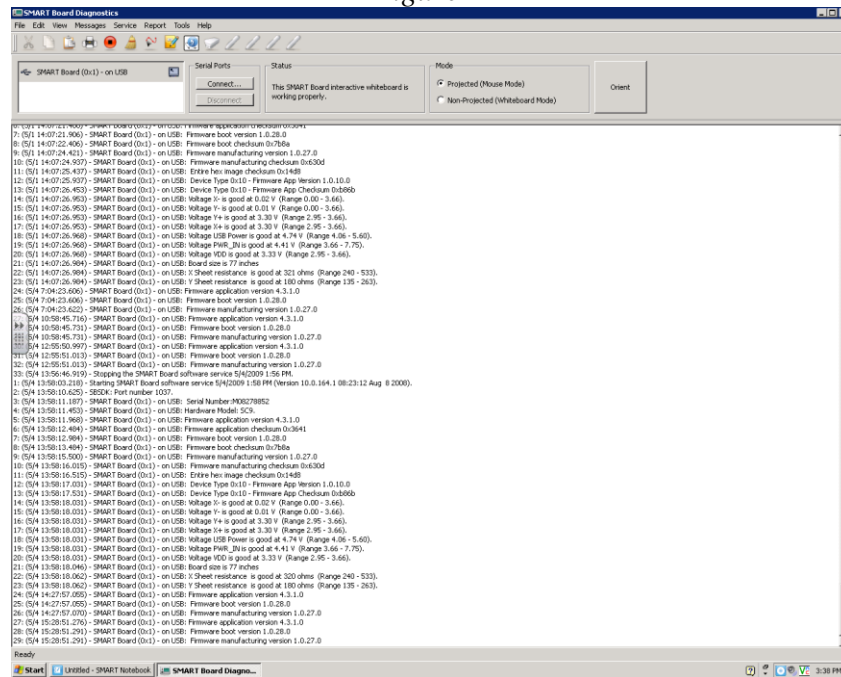

5. Now click on the Report menu
6. Select the SMART Usage Monitor... option
7. If the SMART Usage Monitor is not enabled you will see a screen similar to Figure 3

Figure 3

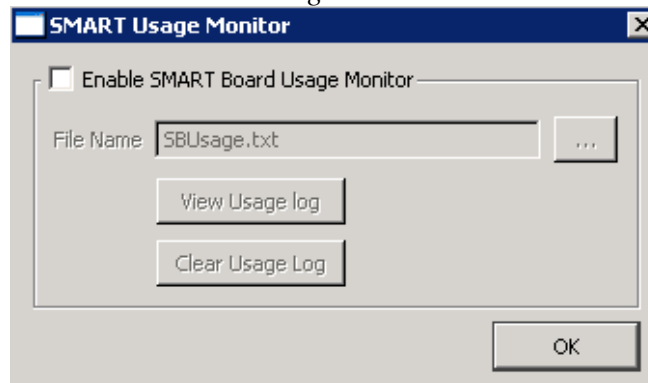

8. Place a check mark in the box “Enable SMART Board Usage Monitor”
9. If you would like to determine the location of the log file do so in the field below the check box.
10. You can view the usage log by clicking on the “View Usage Log” button as long as it isn’t grayed out.
11. NOTE: You will not be able to view any Usage statistics until you enable the SMART Usage Monitor